




HP HDX 16-1160US Keyboard Replacement

This guide allows the user to replace the keyboard for the HP HDX 16-1160US.

Written By: Daniel McBroom

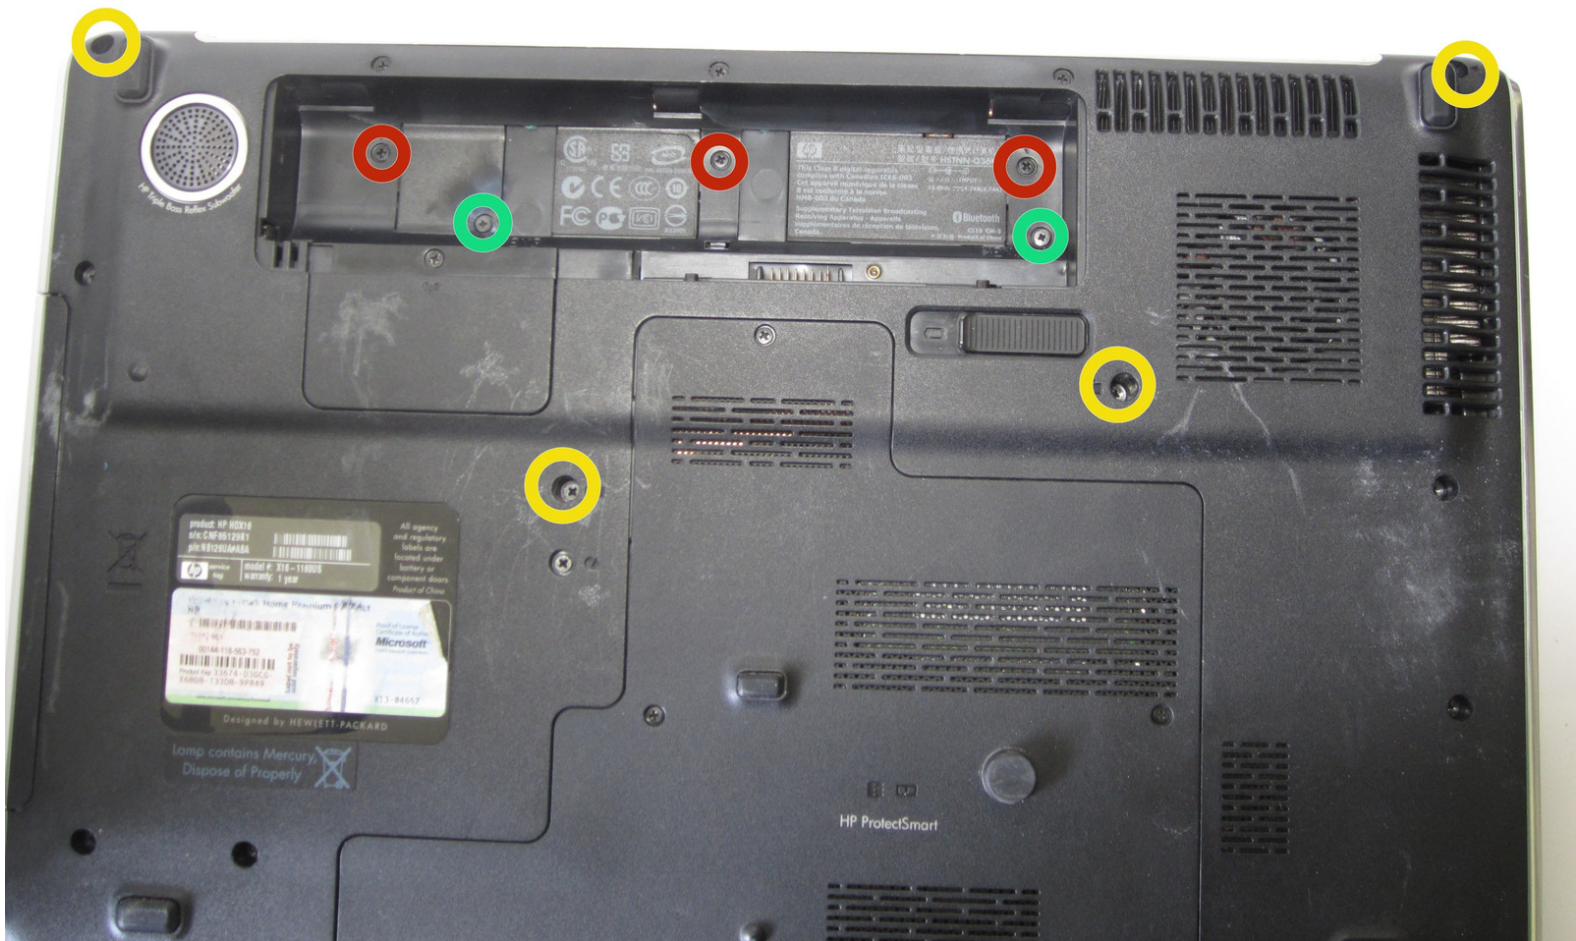



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn the device over so that the bottom side is facing up and the battery is facing away from you.

Step 2




- Locate the slider under the right side of the battery.
- Using your thumb, slide it all the way to the left until the front of the battery lifts up.

Step 3



- With your thumb still holding the slider to the left, use the opposite hand to lift the battery out, removing it from the computer.

Step 4 — Keyboard

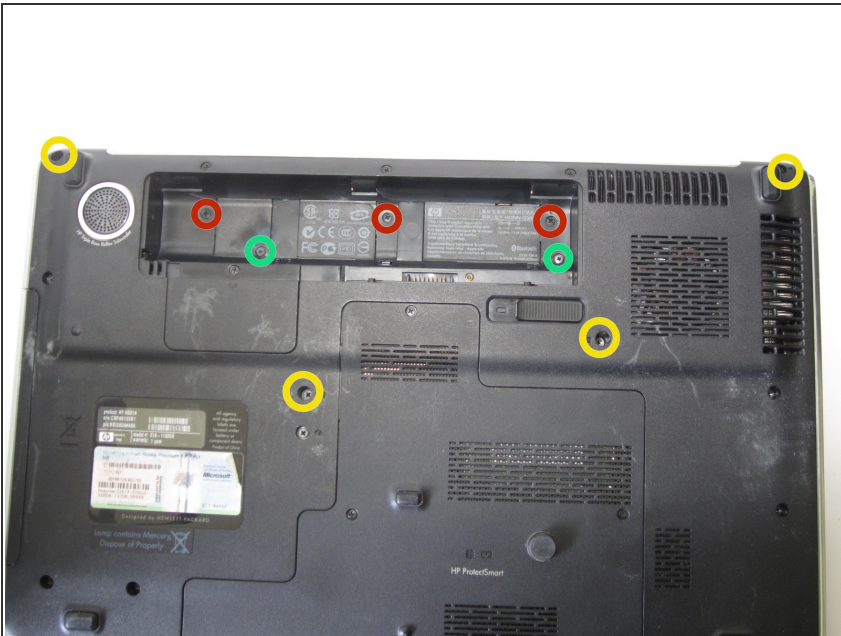

- Remove the three 4mm screws using Phillips #1 screw driver.
- Remove the four 6mm screws using Phillips #1 screw driver.
- Remove the two 3mm screws using Phillips #1 screw driver.

Step 5



- Using your fingers, pry off the speaker cover.

Step 6



- Use the plastic opener to pry up the chrome keyboard cover from the lab top itself. Carefully work around the edges by prying each snap individually.
 - Remove the chrome keyboard cover.
- ⚠ Be careful not to pull the chrome cover completely off because there is a black strip connecting it to the laptop itself.

Step 7




- Locate and remove the two 4mm screws with the Phillips #1 screw driver.

Step 8



- Using your hands, pull the keyboard out.
- ⚠ Do not pull completely off because there is a grey strip connecting it to the laptop itself.

Step 9

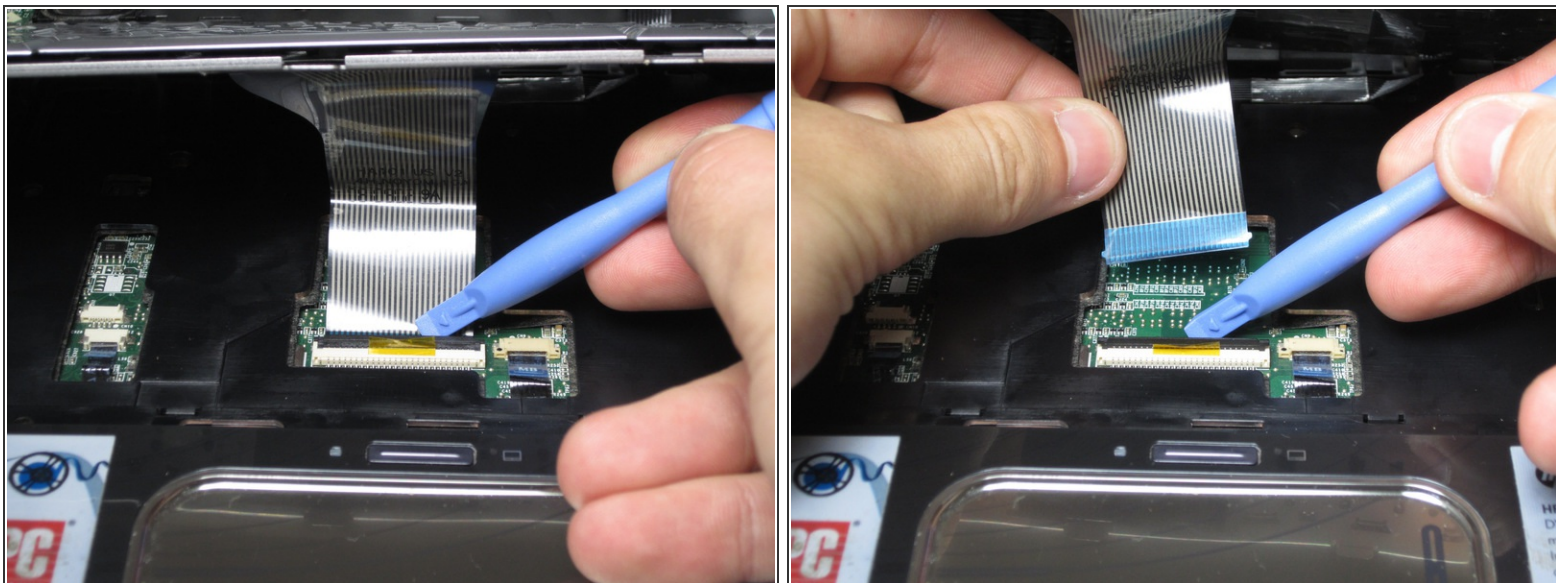

- Lift the black tab using the plastic removal tool. Gently pull the grey strip out, horizontally way from you. This will release the keyboard from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 11:43:13 AM.